






How to start with VarAC.

Download first VARA-HF and VARA Chat to be sure that all is working fine like expected.


<https://rosmodem.wordpress.com/>


EA5HVK software
10 January, 2011

-  **VARA HF v4.5.0 (High Performance HF Modem)**
-  **VARA FM v4.1.8 (VARA for FM transceivers)**
-  **VARA SAT v4.2.2 (VARA for QO-100 geostationary SAT)**
-  **VARA Chat v1.2.9 (Text and File transfer P2P app)**
-  **VARA Terminal v1.1.6 (VARA dumb terminal for BBS's)**

Download both ZIP files and extract to C:\VARA.

Run VARA.exe and click on Settings, Soundcard en set there your soundcard settings.

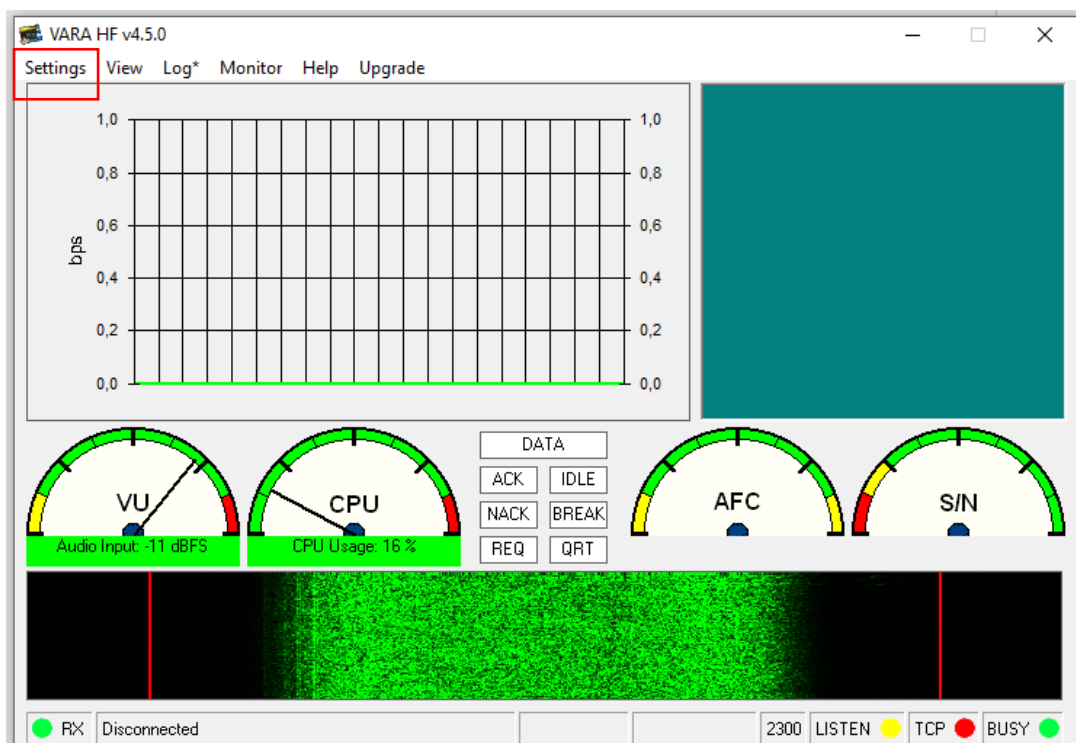


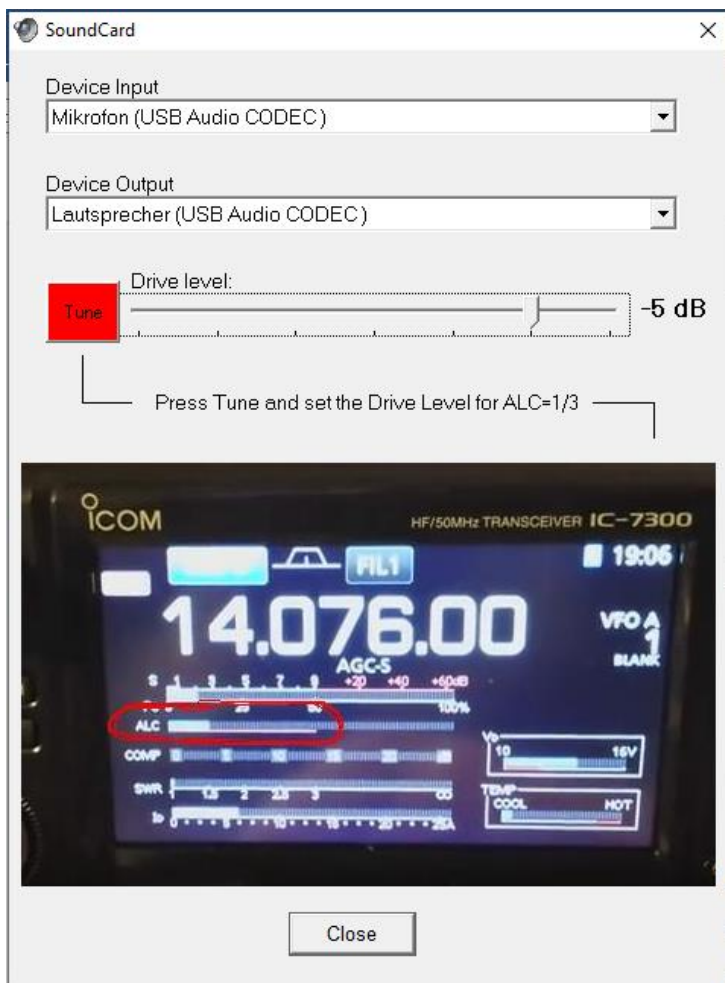


Click close and now start VARA Chat and go to settings.



Chat Setup, change settings and Update

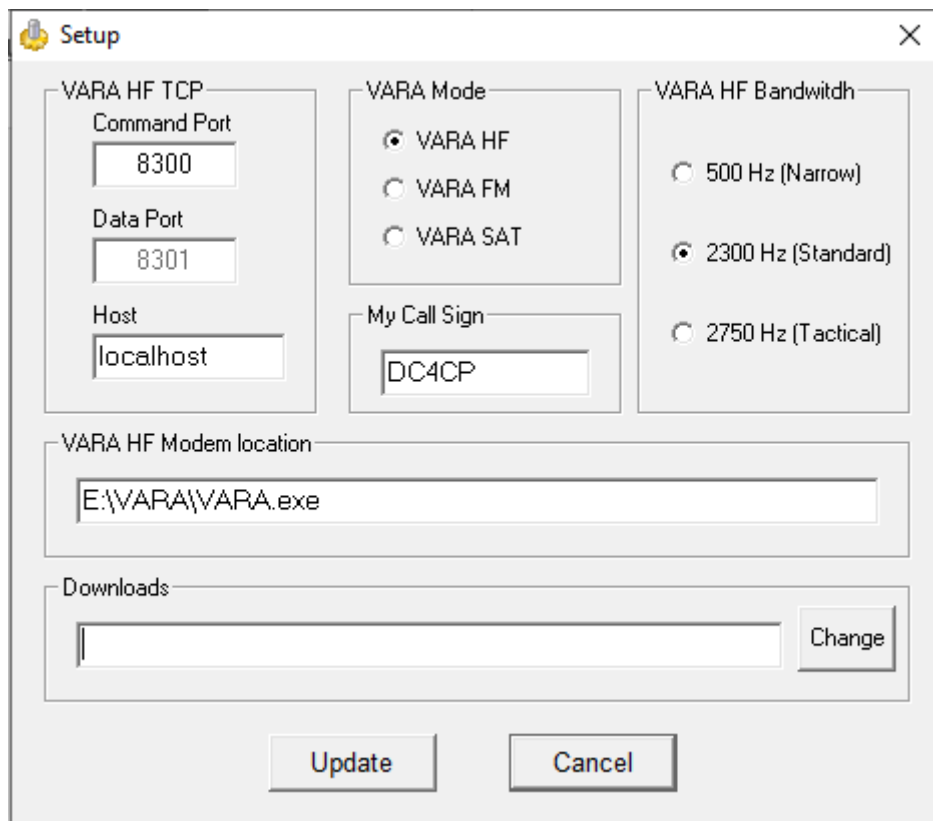


PTT, change settings and close.

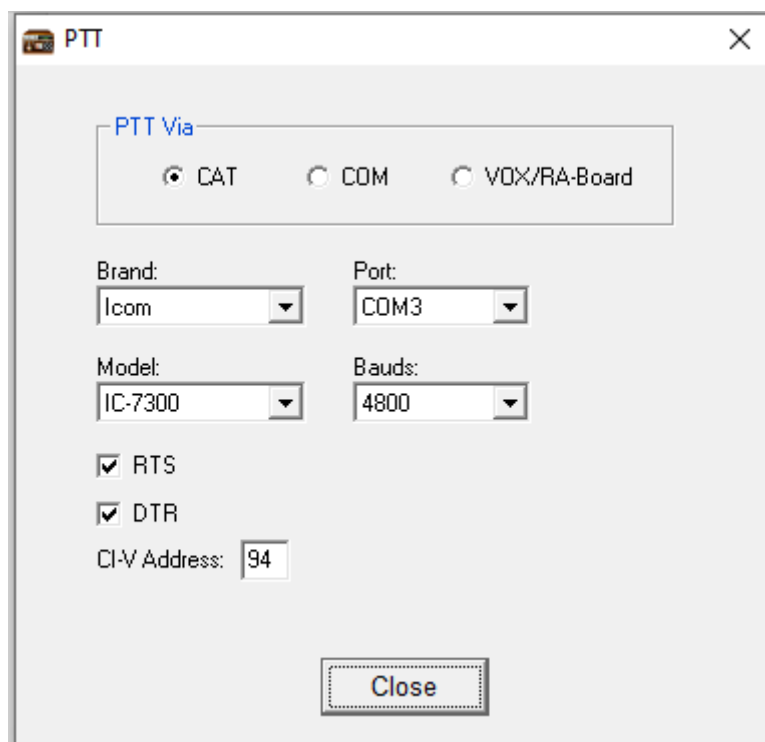




Click on connect and fill in the call from the station you wish to connect.

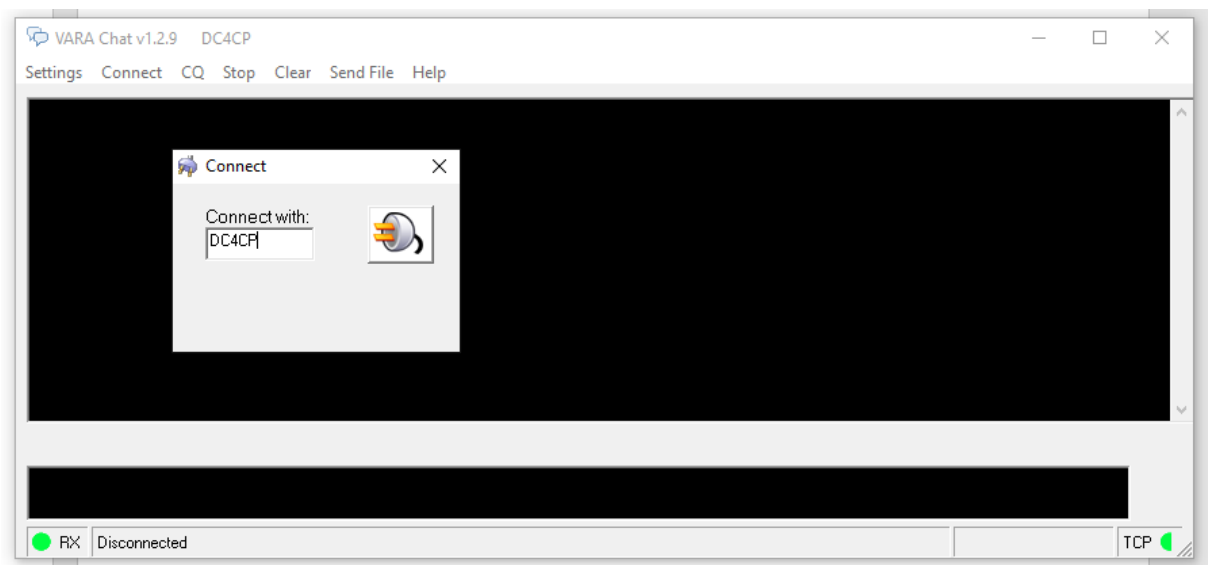


If your transceiver keys on and you see that there is audio going out you know it works and you can proceed to install OmniRig that can be found here: <http://dxatlas.com/omnirig/> Do not download higher versions than the V1.2 otherwise it will not work.

Install Omnirig and setup your transceiver.

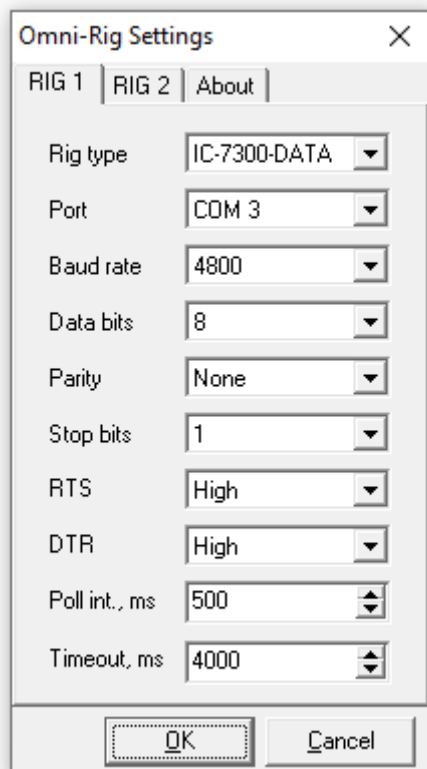


You can define 2 tranceivers.

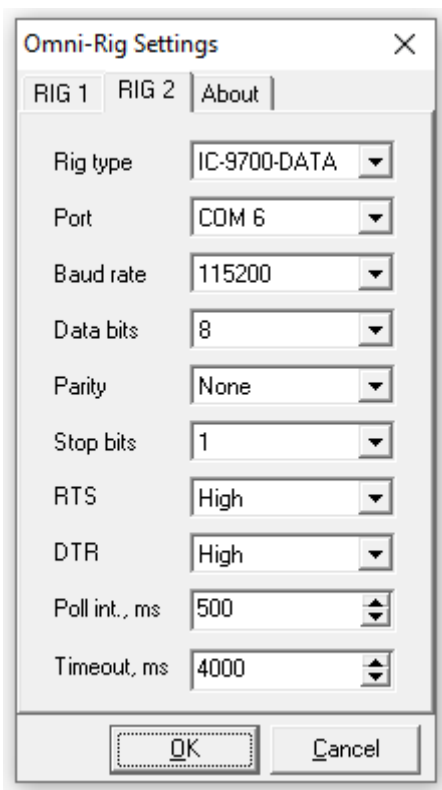

And now it is time to go to the VarAC download section, but before downloading read the information on the website.

<https://www.varac-hamradio.com/>


After installation launch VarAC and go to the settings menu.

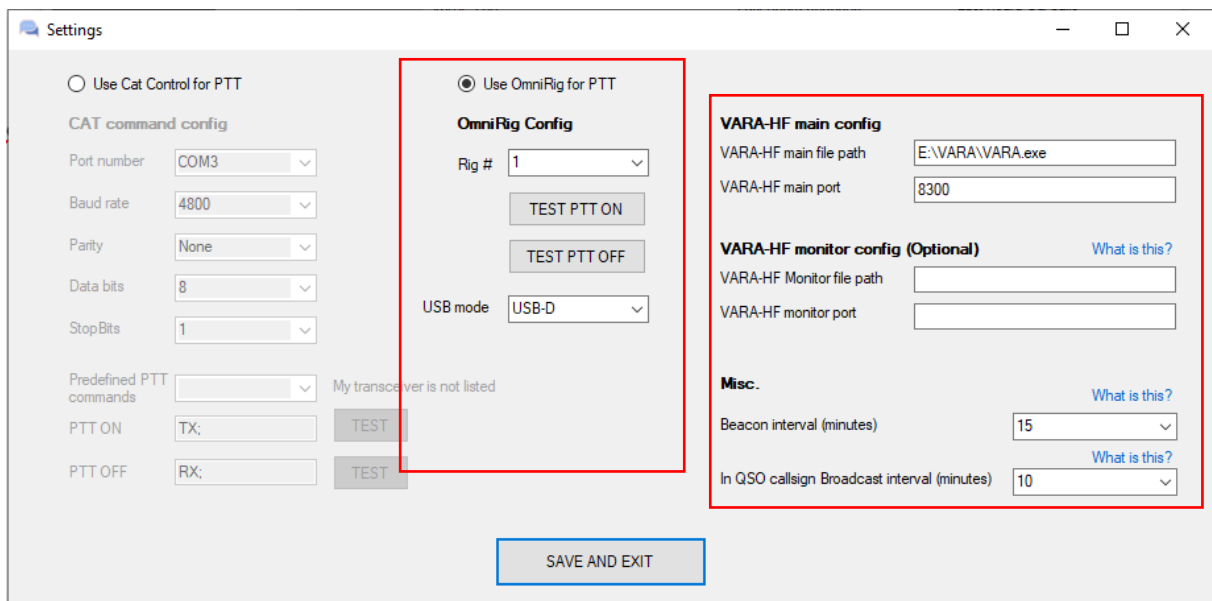


There are 2 things you have to setup:

- 1 Define your radio #Rig1 or 2 and test the PTT on and OFF
- 2 Define the path to the previous installed VARA.exe (the path depends on your installation).

The other settings are under canned messages.

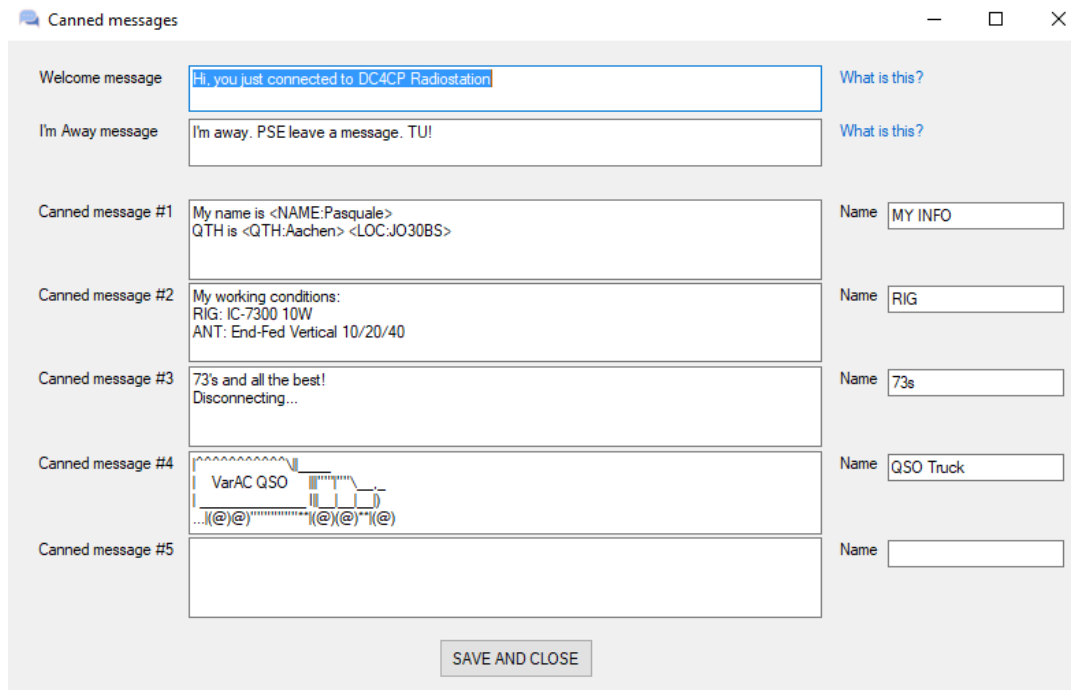

And thats all you need to setup with VarAC.

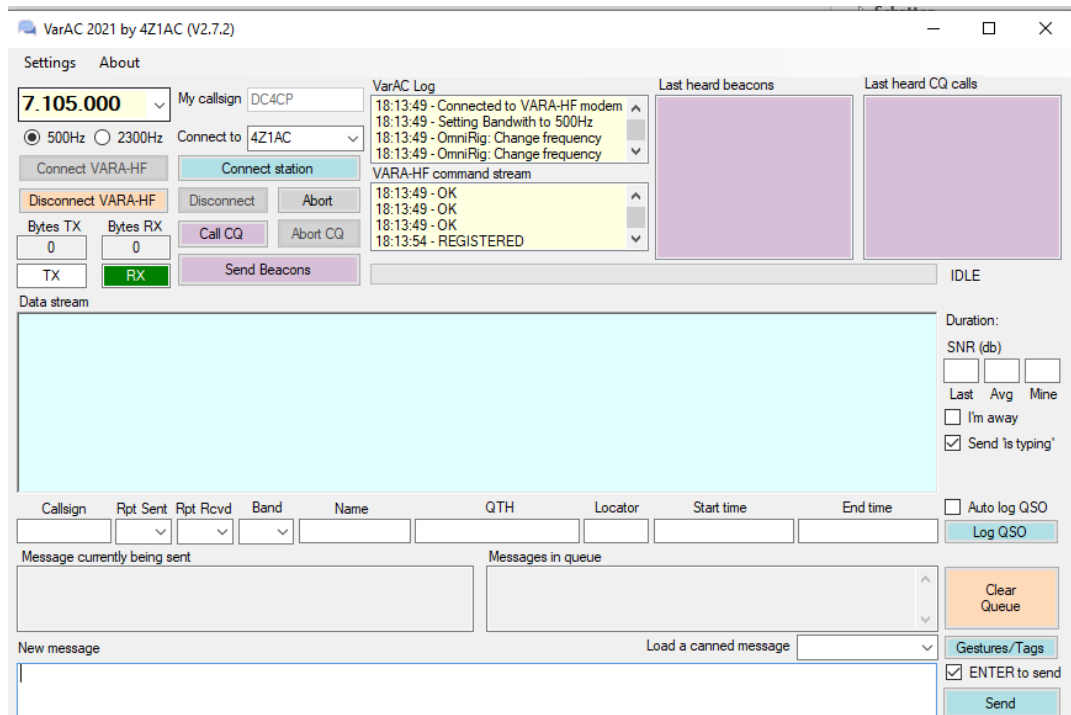

And for all the rest please join <https://www.facebook.com/groups/varahf>